

Items Supplied >

- 1 – RIGHT MUFFLER ASSEMBLY
- 1 – LEFT MUFFLER ASSEMBLY

Application >

KAWASAKI	VN1700 NOMAD	09-13
	VN1700 VOYAGER	09-13
	VN1700 VAQUERO	11-13

Instruction Manual >

4224 / 4227

Page 1 of 1

Read all instructions carefully and completely before installing your new slip-on mufflers


1. Remove the saddlebags carefully.
2. Loosen the large diameter heatshield clamps around both stock mufflers. Leave right side heatshield in place.
3. Remove and save the mounting hardware securing the stock mufflers to the brackets. Loosen the muffler clamps and pull the mufflers free from the headpipes. Remove the muffler clamps from the mufflers for later reuse. The stock gaskets will also be reused; do not remove them from the headpipes.
4. Remove the heatshield from the left muffler and install onto the new left muffler, but do not tighten clamps fully.
5. Install the stock muffler clamps onto the headpipes. NOTE: Position clamps in the same manner as the stock setup with the bolt/nut to the inside and facing the ground. Slide the mufflers onto the headpipes until the mounting holes align with frame mounts, and then fasten to the mounts using the stock bolts but **do not tighten**.
6. Rotate the mufflers as needed so tips are level with the ground and mufflers are parallel with each other.
7. Check all clearances and alignments then tighten the mounting bolts to factory specifications, then fully tighten the supplied muffler clamps.
8. Verify the gap where the mufflers meet the stock heatshields is similar to the gap the stock mufflers allotted; then tighten the heatshield clamps fully. Reinstall saddlebags carefully.

4224 EXHAUST TIP
SHOWN

MUFFLERS MOUNT TO
BRACKETS SAME AS
STOCK SYSTEM

FIGURE 1
LEFT MUFFLER SHOWN

STOCK HEATSHIELD

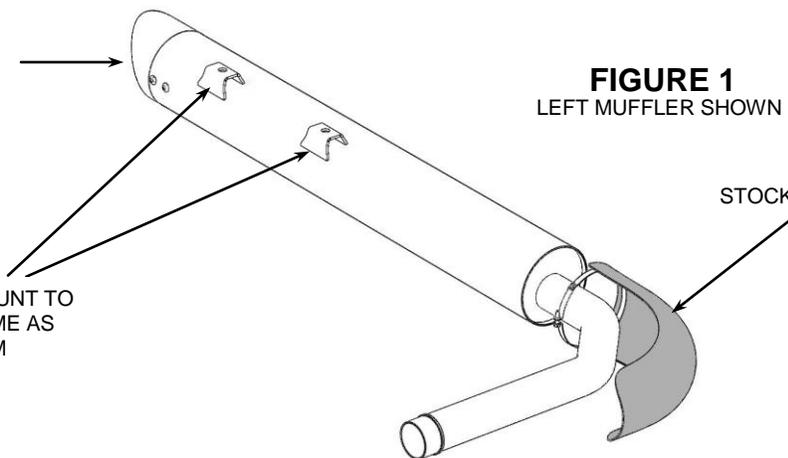

IMPORTANT: To achieve optimum performance from your new mufflers it is suggested that you install a Cobra Fi2000® Digital Fuel Processor. (Cobra Part# 92-1965 for 49 state models and Part# 92-1965-50 for CA models.)

Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause chrome discoloration.

California does not allow the use of aftermarket exhaust systems that remove original equipment catalyts, (except for racing use only) unless the Air Resources Board has issued an Executive Order for that system.

*** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**