


# HOTBODIES RACING.COM

## 08' R6 Undertail Instructions


HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS!



**1)** Remove stock seats, bolts and pop rivets along the undertail, holding the top tail section to the frame. The top part of the tail can now be removed.

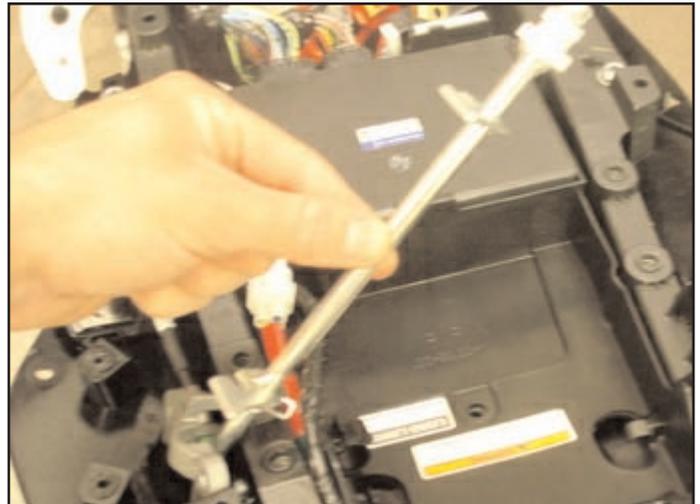

**2)** Remove two bolts that mount seat latching crossbar to subframe. Move bar and latch off to the side. Remove aluminum bracket as pointed out in Fig: 1. Be sure to save all hardware for reinstallation later.

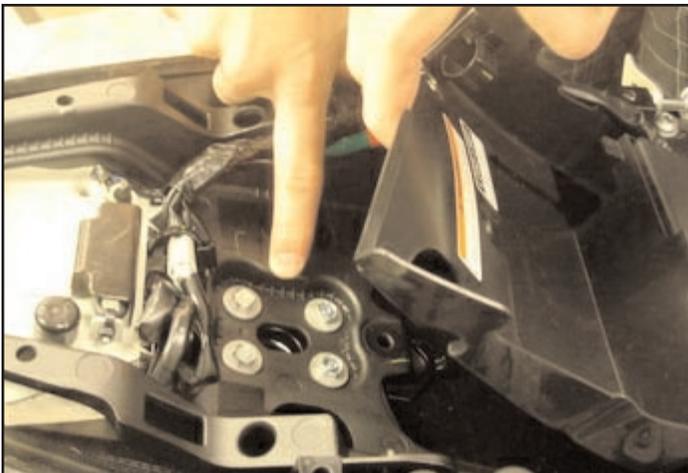

**3)** Lift up on battery box to access 10mm mudflap bolts. Disconnect tail light, signal and license plate light clips. Remove four bolts and detach stock mudflap.



**4)** Disconnect tail light clip and unclip stock undertail. Then remove tail light from stock undertail.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.




Fig. 2

5) Use stock tail light and apply on Hotbodies undertail on double sided tape that is provided(as seen in Fig: 2).


Note\* Smoked Transparent undertail does not include tape\*



5) Slide Hotbodies undertail in place and re-mount using all stock pop rivets to attach undertail and sides of fairing as well. Re-mount and connect taillight. Wire in new turn signals and license plate light. \*Wiring directions below.

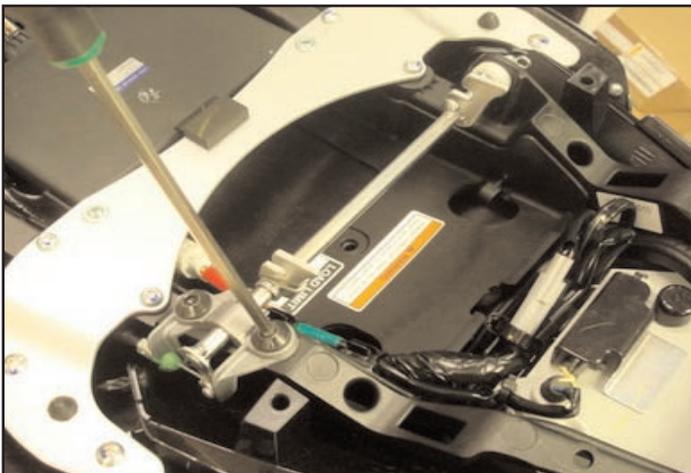

6) Re-install aluminum seat mount, latch and crossbar using all stock hardware.

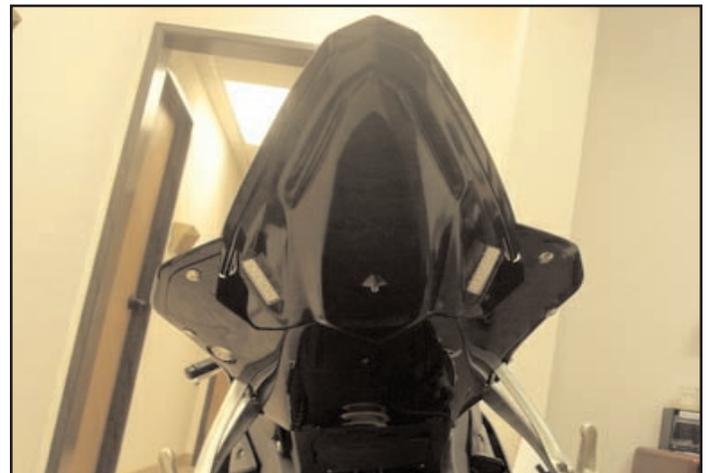

7) Re-install stock tail section with all stock bolts and hardware. \*Note tail light will not bolt up to the new undertail, when everything is securely mounted, taillight will be snugly fitted between new undertail and sub-frame. Re-install seats and your done!

#### WIRING INSTRUCTIONS:

Using clips, splice your turn signal wires to the signals in the undertail. On the bike; the brown wire is the left turn signal wire, dark green wire is the right turn signal wire and the black wires are the grounds. On the undertail the red wires are the power wires and black wires are the grounds.