

# INSTRUCTION SHEET



## LATCH COVERS

### INCLUDED IN BOX:

- (1) Pair Latch Covers
- (4) 8-32 x 1/2" flat head screws

### TOOLS NEEDED:


- T15 Torx driver
- T20 Torx driver
- 3/32" Allen driver
- 11/32" nut driver or wrench

### NOTE:

Work on one saddlebag at a time to ensure you do not mix up your lock sets.

### QUESTIONS?

-  **EMAIL:** [info@getklocked.com](mailto:info@getklocked.com)
-  **CALL:** (605) 996.3700

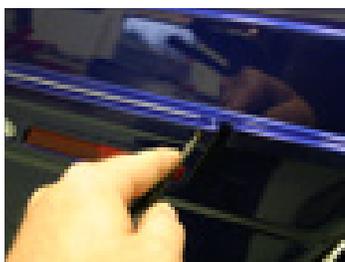

1. Remove the 2 torx screws from the saddlebag latch covers. Do not discard these screws as you will be using one on each of the new latch covers.



2. Support the bag lid so it does not fall and strike the side of the saddle bag. You may wish to place a towel between the lid and bag to add extra protection to painted surfaces for the following steps.



3. Open the bag lid and remove the torx screws from the bag lid tether



4. Fold the tether over to expose the inside of the bag latch



5. Remove the 11/32" nut securing the latch cover from the inside



6. Take notice of how the latch lock is oriented in the latch so you install it correctly with the new latch cover and remove the two torx screws holding it in place



7. Remove old latch cover.



8. Install the new latch cover on the latch and install the lock set with the original torx screws



9. Use one of the torx screws removed from the outside of the latch cover (Fig. 2) and use it to secure the new latch cover from the inside



10. Use the supplied Chrome flat head screws to fasten the new latch cover from the outside to complete the installation

11. Repeat these steps for the other latch cover