



Part No. 2321-0268

MEB8866

REVISION 0

**Plates only, black  
Memphis Fats / Slim  
Phantom**

**Aluminum parts are electrocoated (E-coated)  
for durability and weather resistance.**

**Before assembly, read Warnings inside**



## **WARNING**


1. During installation, make sure that the windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the windshield and hardware do not hit the gas tank.
2. This is a detachable windshield, **ALWAYS** make sure the locking mechanism is fully engaged after installing the windshield.
3. The improper installation of this kit and related components could result in serious injury or death.



## **CAUTION**

1. Memphis Shades windshields are made from Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water (mild dish-washing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your windshield, and will void your warranty.  
For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellent that leaves a super slick surface that makes the next cleaning even easier.
4. At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

## **1. Kit Contents**

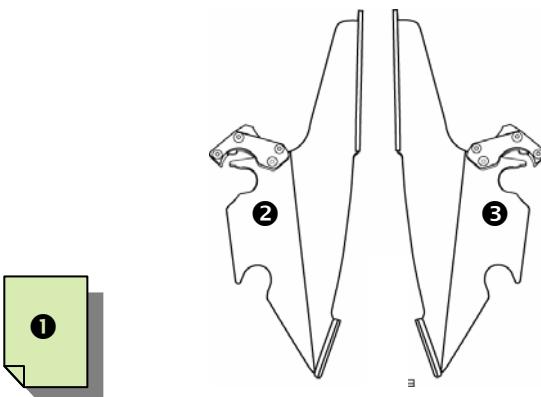

Ref	Code	Description	Qty
①	I8866B	Mounting Instructions	1
②	M1123EB	Clutch side plate assembly, black	1
③	M1124EB	Throttle side plate assembly, black	1

## **2. Mounting Instructions**

**1. Cover gas tank and front fender with towels to avoid damage during installation.**

2. Install the two mounting plates onto the windshield using the bottom bolt and the third bolt up. Discard the Nylon Washers. The small tab goes at the bottom, larger tab goes up. *NOTE: Tabs will point away from the headlight when properly installed.* (Fig 1)

3. Install the windshield by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place. (Fig 2)

4. Tighten all mounting bolts. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts.

**Note: This is a detachable windshield, **ALWAYS** make sure the Locking Mechanism is Fully Engaged after installing the windshield!**

**Continued overleaf.....**

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

### **For Parts and Warranty Help, Contact:**

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at [www.memphisshades.com](http://www.memphisshades.com) or you can also reach us by email:  
[customerservice@memphisshades.com](mailto:customerservice@memphisshades.com)



Part No. 2321-0268

Plates only, black  
Memphis Fats / Slim  
Phantom

## 2. Mounting Instructions, continued

Fig. 1


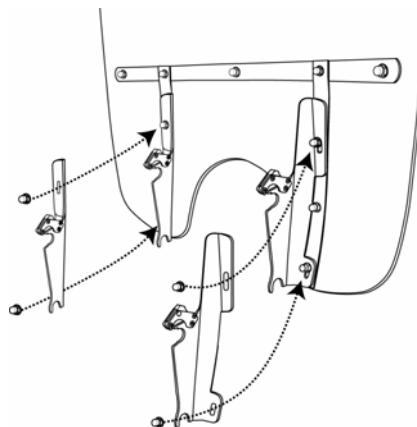


Fig. 2



1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Secure locking Mechanism.
4. Loosen Allen Bolt to adjust angle,  
then re-tighten Allen Bolt.

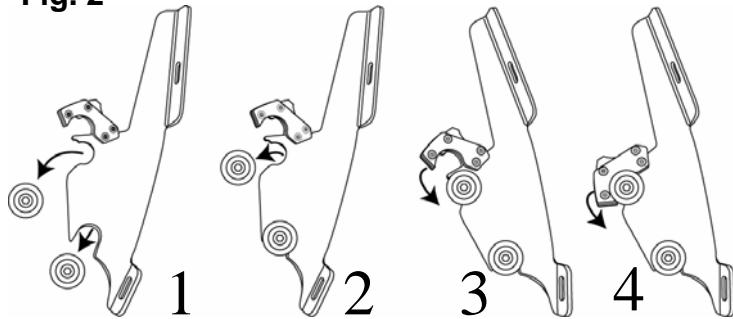