

**2321-0009 MOUNTING INSTRUCTIONS
SPORTSHIELD HONDA NRX1800 VALKRYIE RUNE**

TOOLS REQUIRED: 3/16" Allen wrench (provided)

1. Install the mounting plates onto the windshield using the pre-assembled bolts on the mounting plates. The rubber grommets should be inserted through the holes in the windshield so that the flat round washer part of the grommet lays flat on each side of the windshield. On each plate, get both tabs started before you tighten them. (see Figure 1.1 & 1.2)

Note: *(Wide) – Tabs point in towards each other.

2. Loosely install the four fork clamps 1-3/4" inches apart. (see Figure 2)
3. Loosen the four mounting bolts that are to hold the mounting plates to the fork clamps, and slide the mounting plates onto the fork clamps. (see Figure 3)
4. Adjust the height, angle, and alignment of the shield. Carefully check clearance from steering stop to stop, and tighten all mounting bolts.

WARNING: This is a quick disconnect kit. Always tighten down all mounting bolts after removing or installing the windshield every time.

Fig. 1.1 Left side plate Fig. 1.2 Right side plate


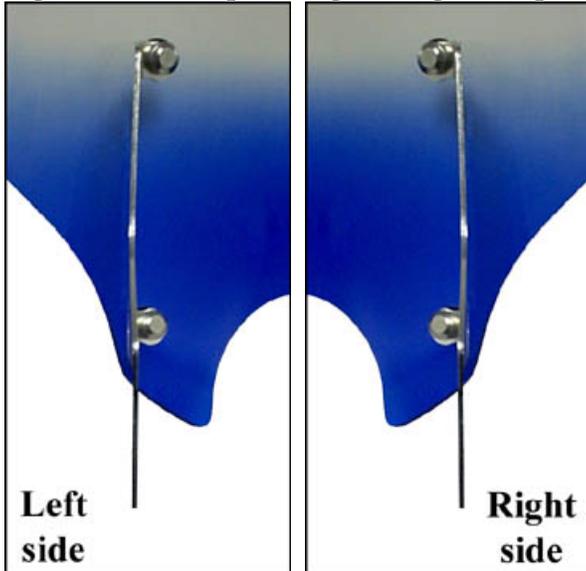


Fig. 2 fork clamps



Fig. 3 Plate mounting

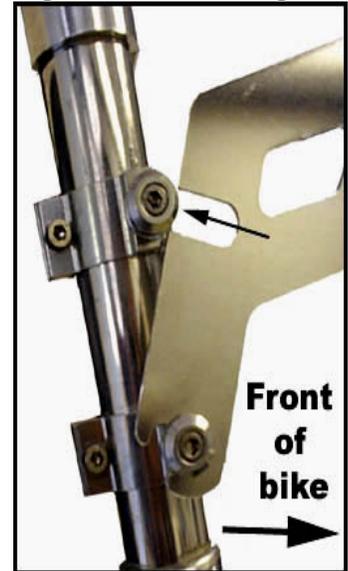

Care and Cleaning Instructions

To clean your windshield, use only warm water and a mild non-abrasive, dishwashing liquid. Use a soft cloth, such as a T-shirt or flannel cloth. To protect your windshield, please use Novus #2 to remove minor scratches, or use a polish like Memphis Shades Shinola which is specially designed for plastic windshields; glass cleansing agents will cause severe damage to your windshield and will void your warranty.

Never use any glass products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any harsh chemicals. This includes Rain-X, brake fluid, acetone, and gasoline.

**2321-0009 MOUNTING KIT
SPORTSHIELD HONDA NRX1800VALKYRIE RUNE**

PART #	DESCRIPTION	QTY.
M8802	MOUNTING INSTRUCTIONS/PARTS LIST	1
M302	1/4" – 20 X 1/2" SS SOCKET HEAD CAP SCREW	4
M505	BUTTON NUT	4
M504	SOCKET SHOULDER WASHER	4
M543	SANTOPRENE GROMMET	4
M501	BEVELED SOCKET WASHER	4
M1055	HONDA NRX1800 RUNE LEFT PLATE -	1
M1056	HONDA NRX1800 RUNE RIGHT PLATE -	1

**FOR MISSING OR REPLACEMENT PARTS OR WARRANTY
INFORMATION CONTACT**

**Memphis Shades warrants all product components, metal and plastic,
against defects in materials and workmanship for 24 months.**

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES

P.O. Box 429

Rossville, TN 38066

(901) 853-0293

Visit us on the web at www.memphisshades.com or

you can also reach us at

customerservice@memphisshades.com