



MOUNTING INSTRUCTIONS

2321-0099 Plates only for Honda VTX 1300 S/R ('03-'08), Black finish.

! WARNING

Read and follow these directions carefully.

During installation, make sure that the fairing and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the fairing and hardware do not hit the tank.

This is a detachable fairing, **ALWAYS** make sure the Locking Mechanism is Fully Engaged after installing the fairing! The improper installation of this kit and related components could result in serious injury or death.

Additional tools required that are not included in this kit. 7/16" or 11mm socket or wrench.

1. Cover gas tank and front fender with towels to avoid damage during installation.

2. Attach the mounting plates to the bolts on the fairing with the washers and acorn nuts provided. (See fig. 1)

3. Install the fairing by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place. (see figure 2)

4. Tighten the upper and lower mounting bolts from steps 3 and 4

5 Adjust the height, angle and alignment of the fairing and tighten **ALL** bolts.

Note: This is a detachable fairing, **ALWAYS** make sure the Locking Mechanism is Fully Engaged after installing the fairing! (see figure 4)

CAUTION

IMPORTANT CARE AND CLEANING INSTRUCTIONS

Memphis Shades Fairings, windshields, wind defelctors and Loweres are made of Lucite® acrylic, and will last for years with proper care. Clean your product with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.

NEVER use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

Glass cleansing agents will cause severe damage to your product, and will void your warranty.

NOTE: At certain times of the day the Sunlight can reflect off the curvature of a windshield or fairing and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the product to avoid reflections.

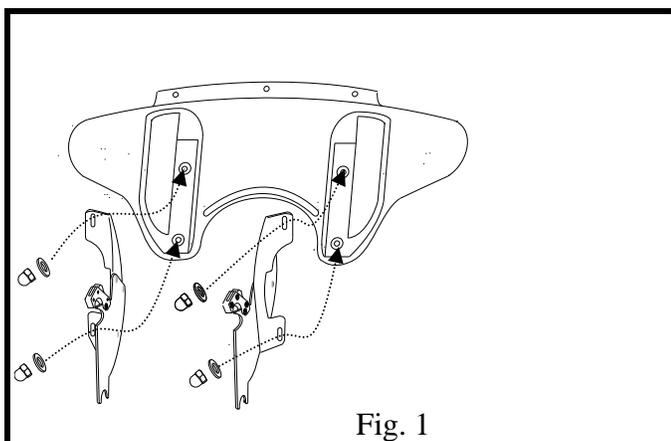


Fig. 1




MOUNTING INSTRUCTIONS


2321-0099 Plates Only for Honda VTX 1300 S/R ('03-'08), Black finish.

Part #	Description	Qty
M8890	Mounting instructions	1
M1216	Left mounting plate, black	1
M1215	Right mounting plate, black	1


Figure 2

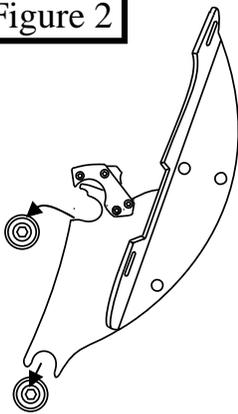

1

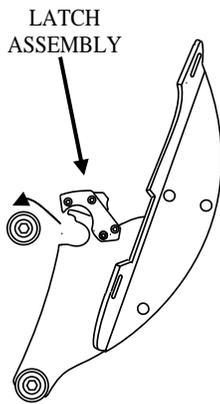

LATCH ASSEMBLY

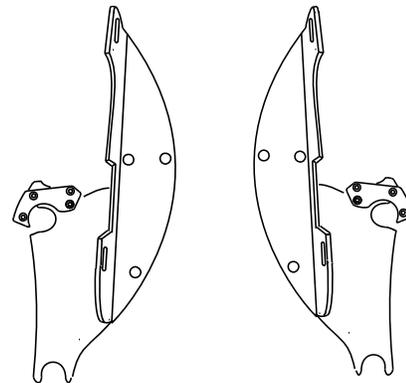


2321-0099 Fairing Mounting Kit


1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Secure locking Mechanism.
4. Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

2

1

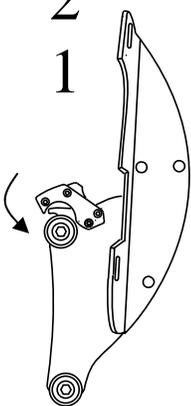

3

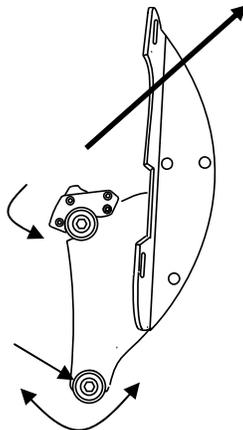

4

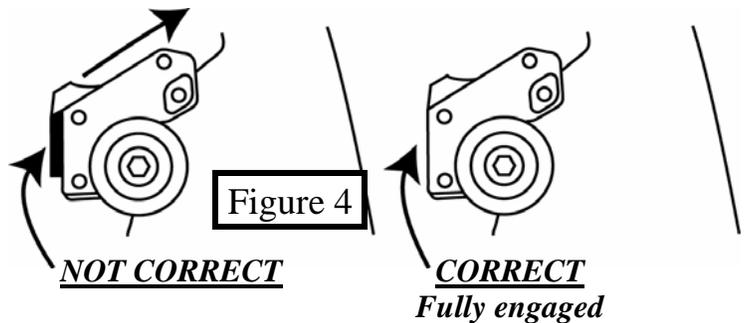


Figure 4

NOT CORRECT

CORRECT
Fully engaged

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES

P. O. Box 429

Rossville, TN 38066

(901) 853-0293

Visit us on the web at www.memphisshades.com or

you can also reach us at

customerservice@memphisshades.com