



MOUNTING INSTRUCTIONS



2321-0060 SPORTSHIELD MOUNTING KIT HONDA VT 1100 SABRE/VT 750 ACE DLX

! WARNING

Read and follow these directions carefully.

During installation, make sure that the windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the windshield and hardware do not hit the tank.

This is a detachable windshield, ALWAYS make sure the Locking Mechanism is Fully Engaged after installing the windshield!

The improper installation of this kit and related components could result in serious injury or death.

Additional tools required that are not included in this kit. 7/16" or 11mm, 8mm Wrench, or 1/4 sockets and ratchet.

1. Cover gas tank and front fender with towels to avoid damage during installation.

2. Install the two mounting plates onto the windshield, using the bolts that are pre-assembled on the mounting plates. The Santoprene Grommets should be inserted through the holes in the windshield so that the flat round part of the Grommet lies flat on each side of the windshield. *Tabs point in towards the headlight.* (See Figure 1)

3. Remove the Allen Screw, Socket Shoulder Washer and slot nut from both sides of the lower bracket. Set them off to the side, they will be used later to join the upper bracket to the lower bracket. Using an 8mm wrench, remove the two bolts that hold the turn signal bar in place, slip the lower windshield mounting bracket behind the turn signal bar (*see figure 2, the headlight is not shown for clarification.*) and re-install the bolts. **The tabs on the lower windshield bracket should be turned up and facing towards the forks.**

4. Using the 6mm Allen wrench provided, remove the original upper triple tree pinch bolt on the throttle side. Install the L-shaped upper bracket assembly and loosely tighten it, use the new longer bolts with spacers that are provided. (*Continued*)

4. (*Continued*) Now insert the Allen Screw into the Socket Shoulder washer, insert them into the upper bracket then into the lower bracket. Now install and loosely tighten the slot nut to join the upper and lower bracket. (*see figure 2, the headlight is not shown for clarification.*) **Tighten these bolts after the windshield has been installed. Repeat step 4 on the clutch side.**

5. Slip the windshield mounting plates and windshield onto the upper and lower bushing assemblies, (see figure 3) and secure the left and right side locking mechanism.

6. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts.

CAUTION




IMPORTANT CARE AND CLEANING INSTRUCTIONS

Memphis Shades Windshields and Lowers are made of Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.

NEVER use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

Glass cleansing agents will cause severe damage to your windshield, and will void your warranty.

NOTE: At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

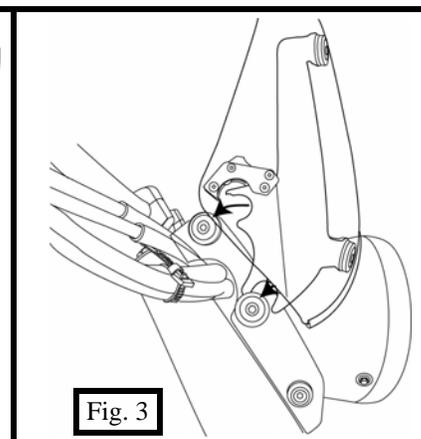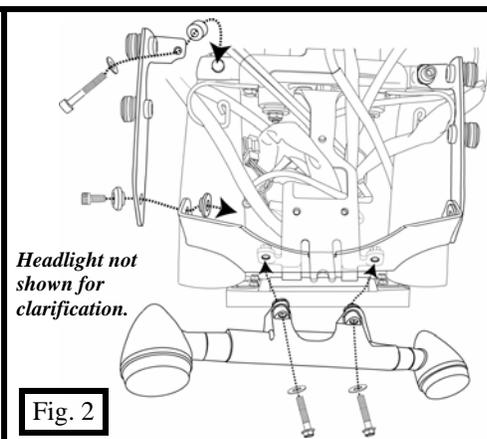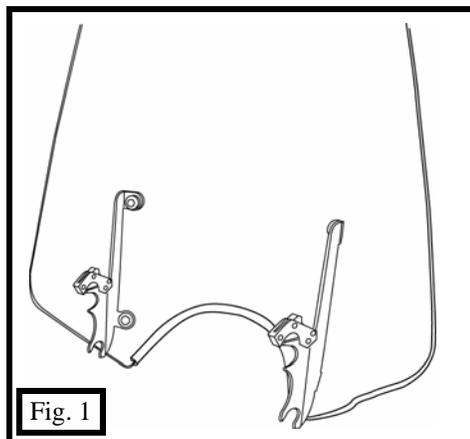





MOUNTING INSTRUCTIONS



2321-0060 SPORTSHIELD MOUNTING KIT HONDA VT 1100 SABRE/VT 750 ACE DLX

PART #	DESCRIPTION	QTY.
M8924	MOUNTING INSTRUCTIONS/PARTS LIST	1
M1155	LEFT SPORTSHIELD MOUNTING PLATE	1
M1156	RIGHT SPORTSHIELD MOUNTING PLATE	1
R323	BUSHING ASSEMBLY (2 PART)	4
R324	#207 EPDM O-RING	4
M306	1/4" - 20 X 5/8" SOCKET HEAD CAP SCREW	4
R318	1" SOCKET SHOULDER WASHER	4
R321	1" RECESSED SPACER WASHER	4
M301	1/4" - 20 X 3/8" SOCKET HEAD CAP SCREW	2
M501	BEVELED SOCKET SHOULDER WASHER	2
R329	SLOT NUT	2
M320	8mm x 45mm SS SOCKET HEAD CAP SCREW	2
M321	5/16" SS WASHER	2


PART #	DESCRIPTION	QTY.
M591	PINCH BOLT SPACER	2
M302	1/4"-20 x 1/2" SS SOCKET HEAD CAP SCREW	4
M504	SOCKET SHOULDER WASHER	4
M543	SANTOPRENE GROMMET	4
M505	BUTTON NUT	8
M578	SELF ADHESIVE PLASTIC WASHER	2
R322C/T	LATCH ASSEMBLY	2
R326	LATCH SPRING	2
R334	LATCH SCREW	8
R341	6mm LONG ARM ALLEN WRENCH	1
M310	3/16" SHORT ARM ALLEN WRENCH	1
M313	3/16" ALLEN WRENCH COVER	1

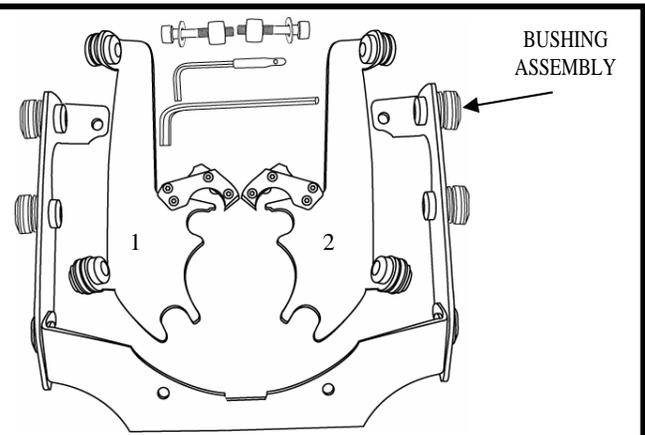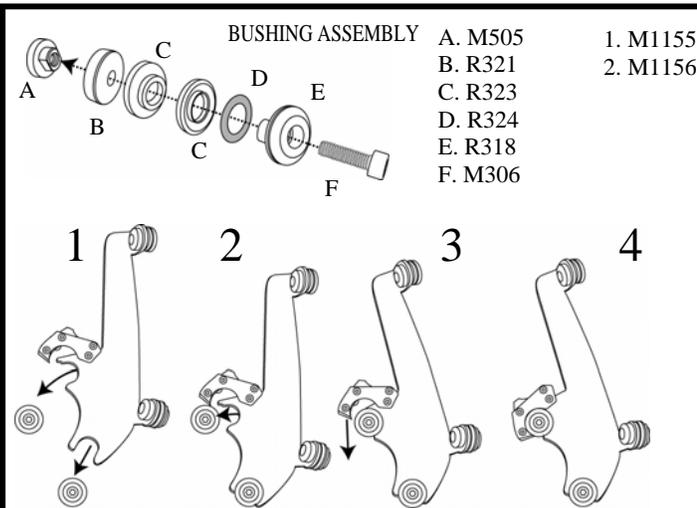


2321-0060 SPORTSHIELD KIT

1. Place lower slot into lower bushing. 2. Rotate top slot into place. 3. & 4. Secure locking Mechanism.

Figure 3

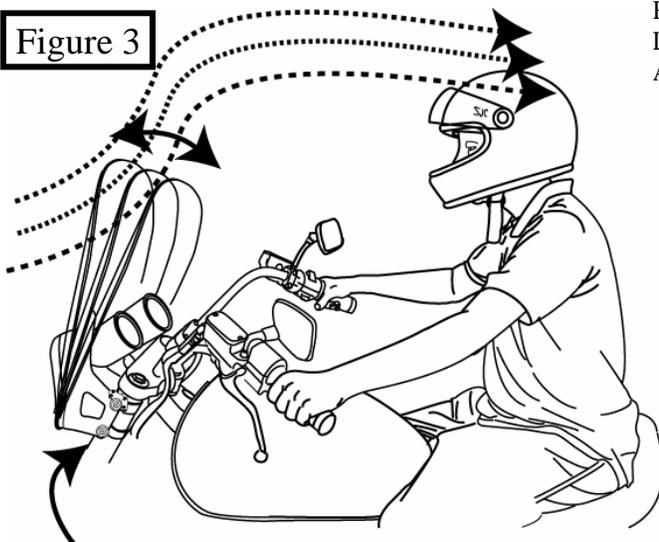

Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

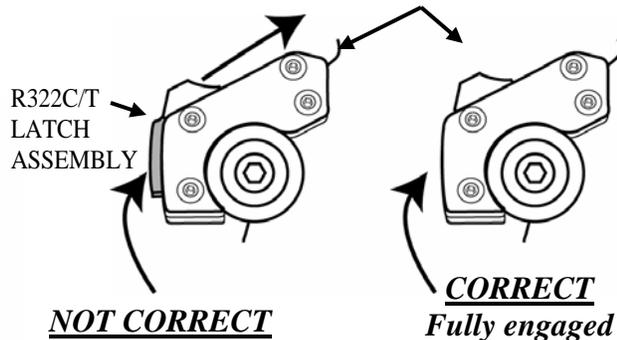

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES

P. O. Box 429

Rossville, TN 38066

(901) 853-0293

Visit us on the web at www.memphisshades.com or

You can also reach us at

customerservice@memphisshades.com