

2321-0022 LOWERS MOUNTING INSTRUCTIONS

TOOLS REQUIRED: 3/16" Allen wrench (provided)

1. Cover the front fender with a towel, in case you drop something.
2. Attach the lowers plastic to the lowers mounting brackets using the pre-assembled bolts and button nuts. Install the components in the order shown in **Figure 1**.

Note: The (8) neoprene washers have been replaced by (4) santoprene grommets. The rubber grommets should be inserted through the holes in the plastic so that the flat round part of the grommet lays flat on each side of the plastic.

3. The mounting bracket tabs should point away from each other when installed correctly. (see **Figure 2**)

Note: The mounting brackets can be mounted pointing up, for those applications where the windshield is too short to reach them otherwise

4. Protective tape has been applied to the inside of the clamps. Loosely install the two fork clamps onto the forks. Attach the lowers mounting brackets to the fork clamps. Adjust height, angle and position of clamps and then tighten them.(see **Figure 3.1**)

Fig. 1 Order of assembly

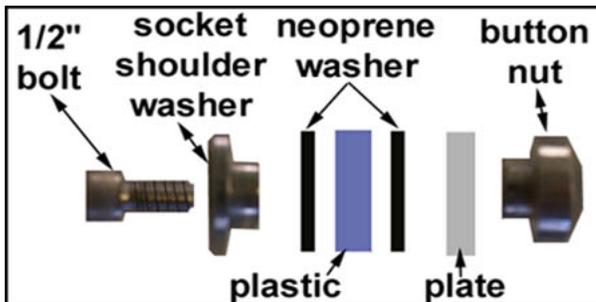


Fig.2 Position of plate tabs


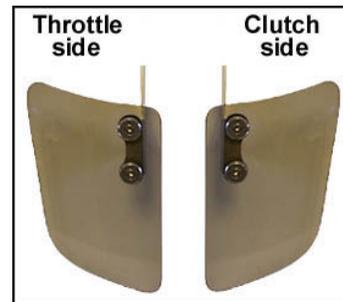


Fig. 3.1 Plates pointing down

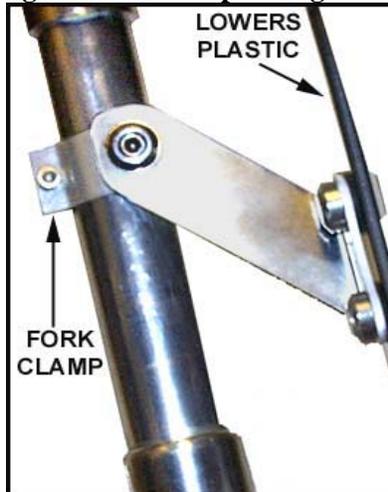

CARE AND CLEANING

To clean your windshield, wash it with warm water and a mild, non-abrasive, dishwashing liquid. Use a soft cloth such as a T-shirt or flannel cloth.

To protect your windshield, use NOVUS #2 to remove minor scratches, or use Memphis Shades Shinola polish specially designed for plastic. NEVER use glass cleansing agents, they may cause severe damage to your windshield.

2321-0022 LOWERS MOUNTING KIT

PART #	DESCRIPTION	QTY.
M9896	INSTRUCTION SHEET /PARTS LIST	1
S1143	LOWERS MOUNTING BRACKET - LEFT	1
S1144	LOWERS MOUNTING BRACKET - RIGHT	1
M501	BEVELED SOCKET WASHER	2
M577	MEDIUM OUTER ADJUSTABLE CLAMP	2
M578	MEDIUM INNER ADJUSTABLE CLAMP	2
M302	1/4"-20 x 1/2" SS SHCS	4
M301	1/4" -20 x 3/8" SS SHCS	2
M504	SOCKET SHOULDER WASHER	4
M543	SANTOPRENE GROMMET	4
M310	3/16" SHORT ARM ALLEN WRENCH	1
M306	1/4" - 20 X 5/8" SS SCHS	2
M505	BUTTON NUT	4

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES

P.O. Box 429

Rossville, TN 38066

(901) 853-0293

Visit us on the web at www.memphisshades.com or

you can also reach us at

customerservice@memphisshades.com