



MOUNTING INSTRUCTIONS

MEM-9935 SPORTSHIELD MOUNTING KIT YAMAHA ROADSTAR WARRIOR

! WARNING

Read and follow these directions carefully. During installation, make certain that when turning the forks, there can be no interference with wiring or cables **AND**, that the mounting hardware can not hit the gas tank, through the windshield's full range of adjustment.

This is a quick change kit, ALWAYS tighten all mounting bolts after removing or installing the windshield! The improper installation of this kit and related components could result in serious injury or death.

- No additional tools required, that are not included in this kit.
1. Cover gas tank and front fender with towels to avoid damage during installation.
 2. Install the windshield mounting plates onto the windshield, using the bolts that are pre-assembled on the mounting plates. The Santoprene grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lies flat on each side of the plastic. (see Figure 1) *Tabs face in towards the headlight when installed correctly.*

WARNING

If the adjustable clamps are installed backwards, it will result in serious gas tank damage. Always check for proper gas tank clearance before tightening hardware. (see Figure 2)

3. Loosely install the fork clamps, approximately 1 3/4" apart. (see Figure 2) **NOTE:** *The two clamps with the 1/8" larger spacers, are to be mounted at the upper position, one left, one right. Clamps with smaller washers, mount in the lower position, one left, one right.*
4. Loosen the four anchor bolts that are to hold the windshield to the fork clamps, and slide the mounting plates onto the anchor bolts. (see Figure 3)
5. Adjust the height, angle and alignment of the shield and tighten ALL bolts.

This is a quick change kit. Always tighten all mounting bolts after removing or installing the windshield.

CAUTION

IMPORTANT CARE AND CLEANING INSTRUCTIONS

Memphis Shades Windshields and Lowers are made of Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.


NEVER use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

Glass cleansing agents will cause severe damage to your windshield, and will void your warranty.

NOTE: At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

Figure 1

Tabs face in towards headlight.

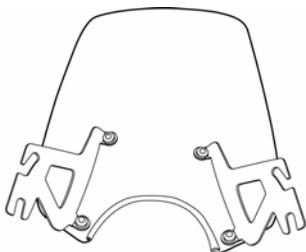

↑ Throttle side, front of bike



CORRECT


↑ Throttle side, front of bike



INCORRECT

WARNING: "Mounting clamps backwards will cause damage to your tank."

Figure 2

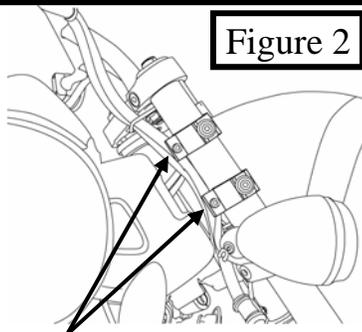

Side view. When installed correctly, Allen bolts are tightened from the back side of the fork, not the front.

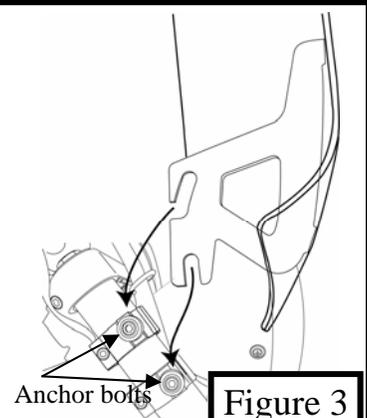


Figure 3




MOUNTING INSTRUCTIONS

MEM-9935 SPORTSHIELD MOUNTING KIT YAMAHA ROADSTAR WARRIOR

PART #	DESCRIPTION	QTY.
M935	MOUNTING INSTRUCTIONS	1
M1013	LEFT ROADSTAR WARRIOR MOUNTING PLATE	1
M1014	RIGHT ROADSTAR WARRIOR MOUNTING PLATE	1
M301	1/4" - 20 X 3/8" SS SOCKET HEAD CAP SCREW	2
M302	1/4" - 20 X 1/2" SS SOCKET HEAD CAP SCREW	6
M303	1/4" - 20 X 3/4" SS SOCKET HEAD CAP SCREW	4
M369	SS FLAT WASHER	2
M523	LARGE INNER ADJ. FORK CLAMP	4
M522	LARGE OUTER ADJ. FORK CLAMP	4

PART #	DESCRIPTION	QTY.
M501	BEVELED SOCKET WASHER	4
M504	SOCKET SHOULDER WASHER	4
M505	BUTTON NUT	4
M543	SANTOPRENE GROMMET	4
M559	1/8" X 3/4 BEVELED SPACER WASHER	2
M310	3/16" SHORT ARM ALLEN WRENCH	1
M313	3/16" ALLEN WRENCH COVER	1
M314	3/16" T-HANDLE ALLEN WRENCH	1
M337	3/16" T-HANDLE ALLEN WRENCH COVER	1

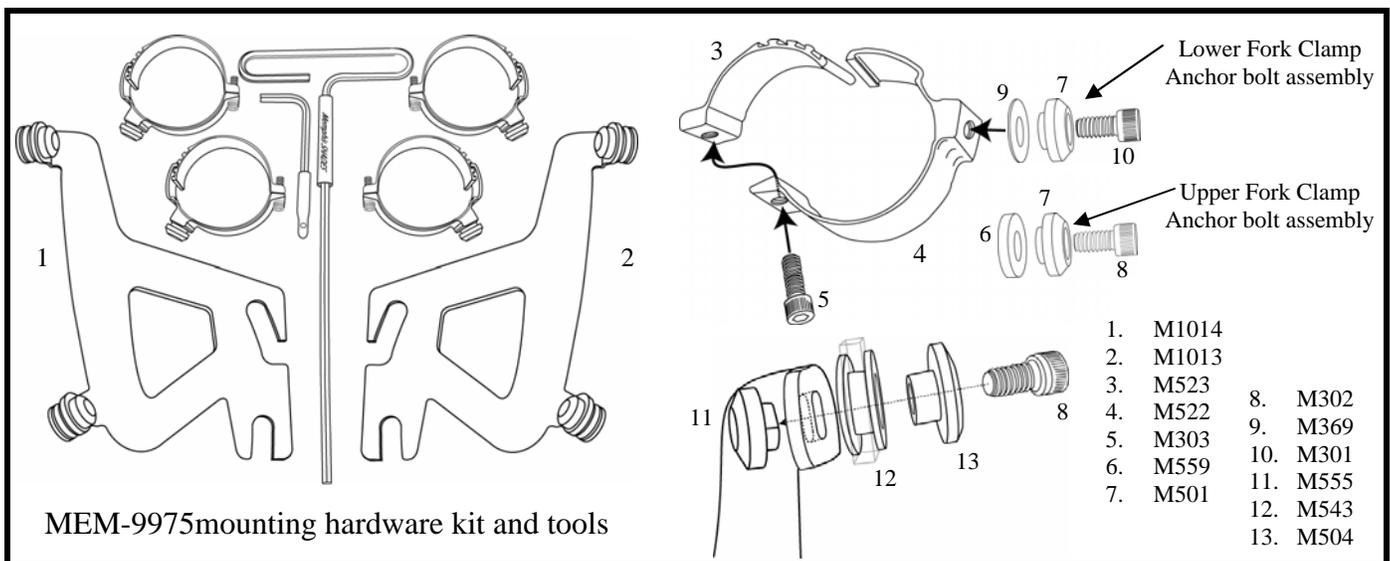

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES
P. O. Box 429
Rossville, TN 38066
(901) 853-0293

Visit us on the web at www.memphisshades.com or
you can also reach us by email:
customerservice@memphisshades.com