



Qty.	Part #	Description
1	1567-1	Winch Mount
1	1566-2	Roller Fairlead Mount Plate
6	HDW2050	5/16" x 3/4" Hex Bolts
6	HDW7058	5/16" Nylock Nuts
2	HDW9003	5/16" Washers
2	HDW1051	8mm x 20mm Hex Bolts


## Winch Mount

### YAMAHA

'03-'06 400/450 Kodiak 4x4, '04-'06 Bruin, '07-'08 400/450 Grizzly 4x4, '07-'13 350 Grizzly 4x4 (IRS & Straight Axle)  
Part Number: 60-8751

### INSTRUCTIONS:

1. Temporarily remove (2) 6mm skid plate bolts and the front bumper.
2. Install the roller fairlead mount plate to the winch mount plate using (2) of the provided 5/16" x 3/4" hex bolts per the illustration.
3. Install the winch mount to the two front bumper tabs using (2) 5/16" x 3/4" bolts, washers and nylock nuts. Be sure the two top tabs still line up inside the top two bumper mounts and tighten the bolts.
4. Install your roller fairlead to the winch mount using the (2) 5/16" x 3/4" hex bolts and (2) 5/16" nylock nuts provided with the fairlead and tighten. (Rollers should turn freely.)  
Note: Bottom roller may need to be removed to run wire rope through.
5. Install the winch on top of the winch mount using the hardware provided with the winch. Be sure to orientate the winch so the cable comes off the top of the drum.
6. Using the instructions provided with the winch, wire accordingly.
7. Re-install the bumper and using the two factory bottom bolts and the two provided 8mm x 20mm top bolts. You may need to pull the top two bumper mount tubes outward to fit the winch plate between them and the frame. Reinstall skidplate.

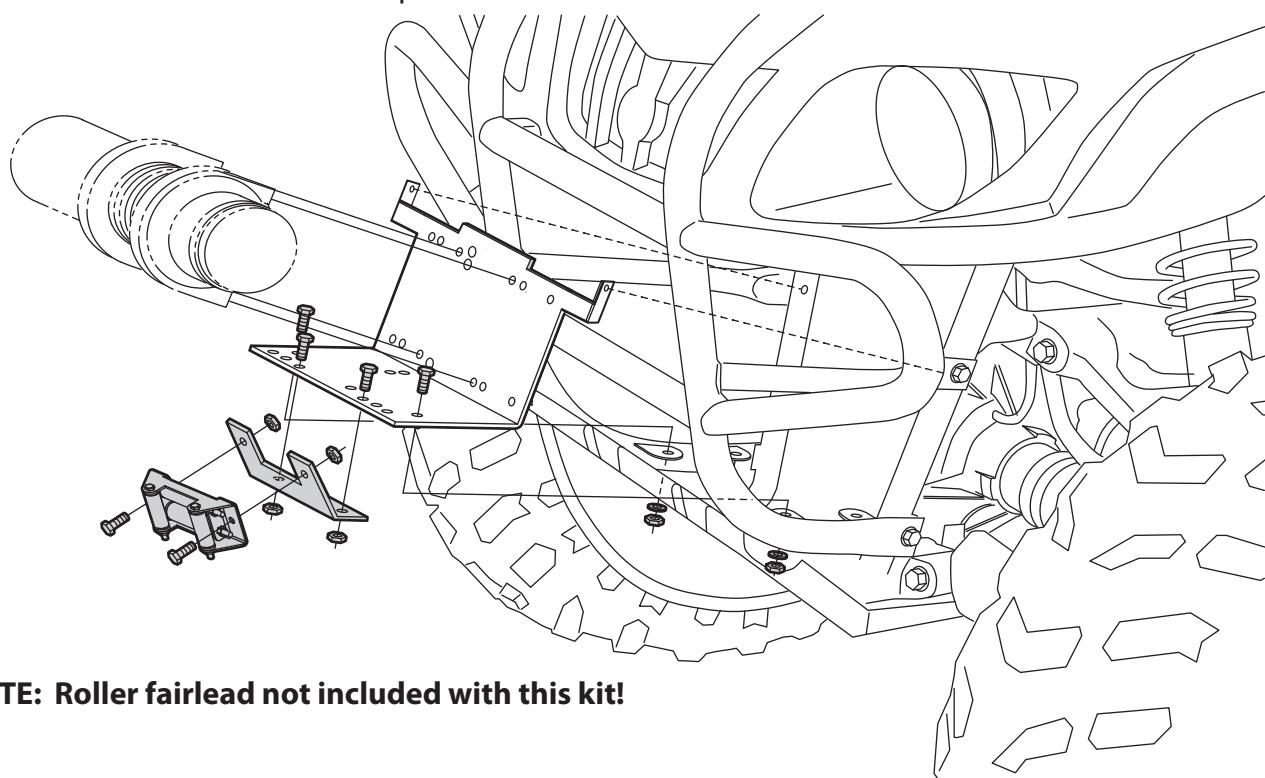

**NOTE: Roller fairlead not included with this kit!**

FOR QUESTIONS REGARDING YOUR ORDER OR RETURNS CONTACT THE COMPANY YOU PURCHASED FROM.  
FOR TECHNICAL OR INSTALLATION QUESTIONS PLEASE CALL THE MANUFACTURER: **763-689-4800**